 



Auxiliaries for series Mbs32/63

Auxiliary contact blocks

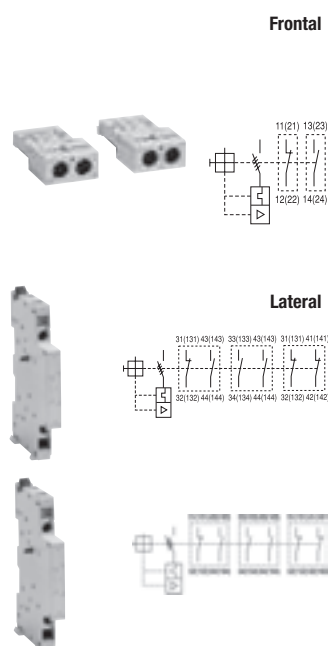


Description	For use with	Type	Cat. No.	Ref. No.	Pack.
Maximum 2 auxiliary contact blocks per manual motor starter	M(b)s32... and M(b)s63...	1 NO	MAHS10FB	136160	5
	M(b)s32... and M(b)s63...	1 NC	MAHS01FB	136161	5
Two contacts Side mounting on the left	M(b)s32... and M(b)s63...	1 NO + 1 NC	MAHS11LL	136162	10
	M(b)s32... and M(b)s63...	2 NO	MAHS20LL	136163	10
	M(b)s32... and M(b)s63...	2 NC	MAHS02LL	136164	10
Two contacts Side mounting on the right	M(b)s32... and M(b)s63...	1 NO + 1 NC	MAHS11LR	136165	10
	M(b)s32... and M(b)s63...	2 NO	MAHS20LR	136166	10
	M(b)s32... and M(b)s63...	2 NC	MAHS02LR	136167	10

 Alarm contact block

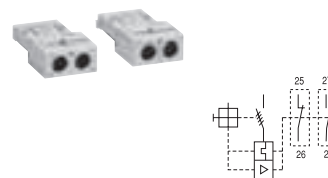


Description	For use with	Type	Cat. No.	Ref. No.	Pack.
Frontal mounting on the right	M(b)s32... and M(b)s63...	1 NO	MAHSb10FR	136157	5
Single contact	M(b)s32... and M(b)s63...	1 NC	MAHSb01FR	136158	5

 Auxiliary / alarm contact block

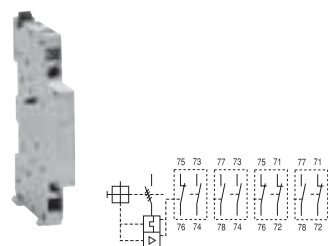

Description	For use with	Type	Cat. No.	Ref. No.	Pack.
Side mounting on the left (front alarm contact block can not be used at the same time)	M(b)s32... and M(b)s63...	1 NO (Alarm) + 1 NO (Aux.)	MAHSd1010LL	136168	10
	M(b)s32... and M(b)s63...	1 NO (Alarm) + 1 NC (Aux.)	MAHSd1001LL	136169	10
Two contacts	M(b)s32... and M(b)s63...	1 NC (Alarm) + 1 NO (Aux.)	MAHSd0110LL	136170	10
	M(b)s32... and M(b)s63...	1 NC (Alarm) + 1 NC (Aux.)	MAHSd0101LL	136171	10

 Short-circuit alarm contact block

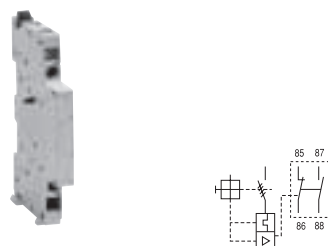

Description	For use with	Type	Cat. No.	Ref. No.	Pack.
Side mounting on the left Two contacts NO + NC Mechanical indication marking	M(b)s32... and M(b)s63...	1 NO + 1 NC	MAHSs11LL	136172	10